

[Click Here](#)



Click on an alphabet below to see the full list of models starting with that letter: TimerMax TimerMaxOutdoor™ Day Timer R m+ h+ LCD Liquid Crystal Display () DO NOT EXCEED 1875 WATT, 15 AMP MAX. LOAD B U T T O N F U N C T I O N S /Time - Set and display present day and time. Timer 6 - Set/view "ON/OFF" programs. Day - Set day(s). See eleven different settings below [Hold for fast forward] h+ - Set hours. [Hold for fast forward] m+ - Set minutes. [Hold for fast forward] /Override - Manual "ON/OFF". When this button is pressed it will change the current state from "OFF" to "ON" or vice versa. When the next programmed time is reached the timer will revert to the programs control. R /Reset - Clear all settings. T i m e r b u t t o n The first press of the MO TU WE TH FR SA SU "Timer" button displays TIMER 1 the ON settings for the ON 1 st program, the second press- its OFF settings. This number shows The third press displays which program of the ON settings for the six is being viewed. 2 nd program, and so on to the twelfth press of the "Timer" button, which displays the OFF settings for the You don't need to use all six "ON/OFF" programs. D a y button settings fo r T i m e r m o d e l. MO TU WE TH FR SA SU - Daily "ON/OFF" settings will repeat every day. 2. MO will only operate Monday. 3. TU will only operate Tuesday. 4. WE will only operate Wednesday. 5. TH will only operate Thursday. 6. FR will only operate Friday. 7. SA will only operate Saturday. 8. SU will only operate Sunday. 9. MO TU WE TH FR - Weekday will operate Monday to Friday. 10. SA SU - Weekend will operate Saturday and Sunday. 11. MO TU WE TH FR SA - 6 Day will operate Monday to Saturday.™ TimerMax Read instructions carefully in order to set-up your TimerMax properly. 1 PLUG THE TIMER INTO AN 125V OUTLET that is visually and manually accessible. Allow built-in batteries to initially charge for ten minutes, fully charge in five hours. [Once fully charged the battery will Time Timer Day h+ m+ remember your settings for up to six months.] If the display appears as Reset Override shown here (flashing), proceed to step 2. If not, press and release small "R /Reset" button gently with a pencil point or opened paper clip. 2 To SET CURRENT DAY AND TIME, the " /Time" button must be pressed and held, throughout this step. Press the "Day" button until the present day of the week appears. Do the same with the "h+" and "m+" buttons to set the time. Note that either A or P appears in the bottom right of display window to indicate AM or PM. 3 To SET THE TIMER, press the "Timer" button once and the display will appear as shown here. Next, set the time (with the "h+" and "m+" buttons, as above) and day(s) you want your appliance/light "ON" [refer to the Day button section on the bottom LEFT of this page for a list of 11 different day(s) options]. Press the "Timer" but- ton a second time [note that OFF appears in the display] and set the time and day(s) you want your appliance/light "OFF". For more detail, see examples on other side. This step can be repeated five times, for a total of 6 "ON/OFF" programs. 4 Press the " /Time" button to return to current day and time display. 5 Finally, plug your appliance/light into the timer. Be sure that the item plugged into the timer is switched "ON". HINTS and TIPS - - - : The rechargeable battery in the timer should be charged first by plugging it into a (regular household outlet (125V) for ten minutes. Ensure the "ON/OFF" switch on your appliance or light is in the "ON" position when (connected to the timer. Do not expose the timer to extremely high or low temperatures. Do not place in (6 direct sunlight. th program. TimerMax is for indoor use only. TimerMax Outdoor is weatherproof. (Display is clearer when viewed from above. (To fast forward, press and hold the "h+", "m+" or "Day" button. (Check your programmed times by pressing the "Timer" button (up to 12 commands (available). Ensure the hour has been set correctly to AM or PM, indicated either by A or P. ((Return to the clock function by pressing the " /Time" button. (/TimerMaxOutdoor™ O P E R A T I N G I N S T R U C T I O N S For any given day and time, if one program is set to ON, and another program OFF, TimerMax will turn your appliance/light OFF. 140 58th Street, PO Box 67, Brooklyn, NY 11220 718-943-7000 • Toll Free 800-730-3707 is the trademark of The Stanley Works and Subsidiaries. Produced under license by The NCC, Brooklyn, New York. Customer Service Assistance Toll Free 800-730-3707 MO 12 00 : OFF MO TU WE TH FR SA SU 3 35 : OFF MO TU WE TH FR SA SU - - - - : TIMER 1 ON This number represents which program of six is being viewed. www.thencc.com •™ P 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 TIMERMAX DIGISLIM™ QUICK START GUIDE GUIA DE INICIO RAPIDO GUIDE DE DEMARRAGE RAPIDE Customer Service / Servicio al Cliente / Service à la clientèle 1-800-730-3707 • 10AM - 6PM, EST Monday to Friday / Lunes a Viernes / Lundi au vendredi Model/Modelo/Modele# TM-262